

RocketRAID 620L

PCIe 2.0 x1 RAID Controller



Quick Installation Guide

V1.00

Operating System


- Windows 11, 10, 8.1, 7
Windows Server 2022, 2019, 2016, 2012, 2008
- Linux kernel 3.10 and later (Redhat/Ubuntu/Debian/Fedora)

RocketRAID 620L Kit Contents

- 1x RAID Controller card
- 2x SATA cables
- 1x Low Profile Bracket
- 1x Quick Installation Guide

RocketRAID 620L Hardware


Front View

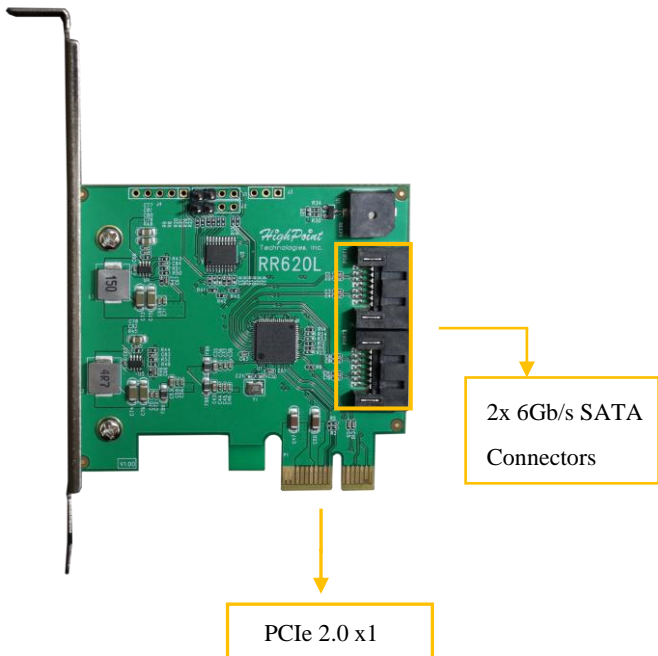

RocketRAID 620L Hardware Installation

Note: Make sure the system is powered-off before installing the RAID Controller.

1. Connect RocketRAID 620L into the PCIe 2.0/3.0/4.0 x1, x4, x8 or x16 slot of the motherboard;
2. After installing the RocketRAID 620L, attach the hard disks or disk enclosure to the RocketRAID card using the SATA cables.

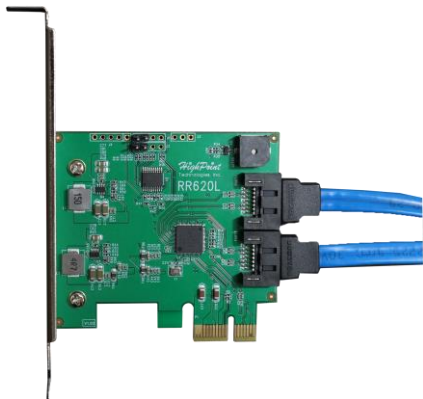

3. Close and secure the system chassis.

Resources

A variety of manuals, guides and FAQ's are available for RocketRAID 620L RAID controllers. In addition, we recommend visiting the Software Downloads webpage for the latest drivers, management interfaces, and installation guides.

Software Download:

Driver, WebGUI, installation Guide:

<https://www.highpoint-tech.com/rr600-overview>

Other Reference / Information:

HDD&SSD Compatibility Lists, Installation Guides

[HighPoint Rocket_RocketRAID HDD_SSD Compatibility List_190809.pdf \(filedn.com\)](#)

FAQ & Troubleshooting:

https://highpoint-tech.com/USA_new/support.htm

Customer Support

If you encounter any problems while utilizing the RAID controllers, or have any questions about HighPoint Technologies, Inc. products & solutions, feel free to contact our Customer Support Department.

Web Support:

<https://www.highpoint-tech.com/support-and-services>

HighPoint Technologies, Inc. websites:

<https://www.highpoint-tech.com>

© Copyright 2022 HighPoint Technologies, Inc. All rights reserved.