



Checking the PCIe Bandwith of your HighPoint NVMe Controller using HighPoint Command Line Interface (CLI)


1. Go to Terminal



2. Type hptraidconf to enter the CLI



3. Type query enclosures. Make sure that the Link Width is x16 and Link Speed is Gen 3 for maximum performance.

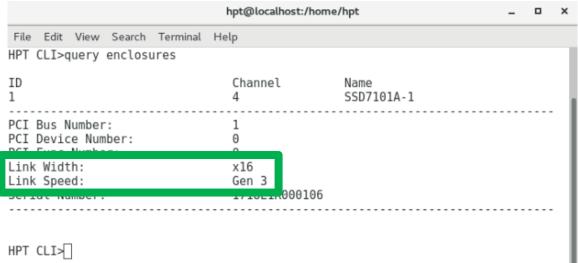

Page 1 5/8/2018