# SSD7101A/7204/7104/7120/6540/6540M/7180/7184/7140

# **Data RAID Linux Installation Guide**

# **Contents**

Overvie	ew	3
Prerequ	uisites for a Data-RAID Configuration	4
Driver Installation		5
Instal	lling the Driver	5
Upda	ting the Driver	9
Unins	stalling the Driver	13
HighPo	oint RAID Management (WebGUI) Installation / Driver Installation Ve	rification
		14
Trouble	eshooting	17
WebGUI		17
1.	The WebGUI fails to install	17
2.	The WebGUI cannot connect to the controller	17
3.	Fail to compile gcc, make and other driver files.	18
4.	If you experience any other WebGUI or CLI related problems	19
Conti	roller and Drive Detection Issues	19
Annandiy		20

# Overview

This guide includes important hardware/software requirements, installation & upgrade procedures, and troubleshooting tips for using SSD7101A-1, SSD7120, SSD7204, SSD7104, SSD7180, SSD7184 and SSD7140 NVMe RAID controllers and SSD6540/6540M RAID enclosures with a Linux operating system.

# **Prerequisites**

This section describes the base hardware and software requirements for SSD7000 series NVMe RAID controllers & enclosures.

#### **Driver Installation**

This section covers driver installation, driver upgrade and driver uninstallation procedures for SSD7000 series NVMe RAID controllers & enclosures in a Linux environment.

# **Management Software Installation**

This section explains how to download and install the HighPoint RAID Management Software Suite for Linux distributions. The download includes both the Web RAID Management Interface (WebGUI), and the CLI (Command Line Interface).

# **Troubleshooting**

Please consult this section if you encounter any difficulties installing or using SSD7000 series NVMe RAID controllers or enclosures. It includes descriptions and solutions for commonly reported technical issues.

# **Appendix**

This section describes how to collect trouble shooting information for support cases you have submitted via our Online Support Portal.

# **Prerequisites for a Data-RAID Configuration**

The HighPoint SSD7101A-1, SSD7120, SSD7104, SSD7204, SSD6540M, SSD6540, SSD7180, SSD7184, & SSD7140 were designed to support data-only NVMe storage configurations. In order to configure a non-bootable NVMe RAID array, you will need the following:

- 1. **An NVMe SSD must be installed**. You must have at least one NVMe SSD installed into the SSD7000 series RAID controller or enclosure.
- 2. **A PCIe 3.0 slot with x8 or x16 lanes.** SSD7200 series RAID controllers (such as the SSD7204) can be used with PCIe 3.0 slots that have either x8 or x16 lanes. All other SSD7000 series NVMe solutions require x16 lanes for maximum performance.
- 3. Make sure any non-HighPoint drivers are uninstalled for any SSD's hosted by the SSD7000 series RAID controllers. 3rd party software and manufacturer provided drivers may prevent the SSD7000 controller or enclosure from functioning properly.

# Warnings:

- 1) Failing to remove the controller and SSD's when uninstalling the driver may result in data loss.
- 2) Always make sure the SSD7000 driver is installed before moving a SSD7000 series NVMe RAID controller & RAID array to another Linux system.

Linux distributions will always load the default NVMe support after the SSD7000 driver has been uninstalled, or if it detects the present of a card when no driver has been loaded – this driver will only recognize the NVMe SSD's as separate disks.

If the SSD's are recognized separately, any data they contain may be lost – this includes RAID configuration data.

# **Driver Installation**

# **Installing the Driver**

- **1.** Power on the system and boot the Linux distribution.
- **2.** Open a system terminal with root privileges, and verify that the SSD7000 series controller or enclosure is detected by using the following command:

# **Ispci**

# Example screenshot (SSD7101A/7104/7120/6540/6540M):

```
[Contillocal test]# lspci

00:00.0 Nost bridge: Intel Corporation 8th Gen Core Processor Host Bridge/DRAM Registers (rev 0a)

00:00.0 Nost bridge: Intel Corporation Xen E3:1200 v5/E3:1500 v5/Eth Gen Core Processor PCE Controller (x16) (rev 0a)

00:02.0 V0K compatible controller: Intel Corporation Unito Graphics 630 (Desktop ) Series)

00:12.0 Signal processing controller: Intel Corporation Cannon Lake PCH Thermal Controller (rev 10)

00:12.4 Septimizer (intel Corporation Cannon Lake PCH SB 31) sHCH Host Controller (rev 10)

00:12.4 PAM memory: Intel Corporation Cannon Lake PCH SB 31) sHCH Host Controller (rev 10)

00:14.3 Betwork controller: Intel Corporation Lake PCH SB 31) sHCH Host Controller (rev 10)

00:14.5 PCH PCH SB 320 shc 10 shc 10
```

# SSD7204:

#### SSD7184/7180:

```
19:00.2 System peripheral: PLX Technology, Inc. Device 87d0 (rev ca)
19:00.3 System peripheral: PLX Technology, Inc. Device 87d0 (rev ca)
19:00.4 System peripheral: PLX Technology, Inc. Device 87d0 (rev ca)
1a:08.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
1a:09.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
1a:09.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
1a:09.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
1a:10.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
1a:11.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
1a:12.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
1a:13.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
1a:13.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
1b:00.0 Non-Volatile memory controller: Western Digital Device 2400
1d:00.0 Non-Volatile memory controller: Western Digital Device 2400
1d:00.0 Non-Volatile memory controller: Western Digital Device 2400
1f:00.0 Non-Volatile memory controller: Western Digital Device 2400
20:00.0 Non-Volatile memory controller: Western Digital Device 2400
21:00.0 Non-Volatile memory controller: Western Digital Device 2400
20:00.0 Non-Volatile memory controller: Western Digital Device 2400
21:00.0 Non-Volatile memory controller: Western Digital Device 2400
20:00.0 Non-Volatile memory controller: Western Digital Device 2400
21:00.0 Non-Volatile memory controller: Western Digital Device 2400
22:00.0 Non-Volatile memory controller: Western Digital D
```

#### SSD7140:

```
00:1f.6 Ethernet controller: Intel Corporation Ethernet Connection (7) I219-V (rev 10)
01:00.9 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
01:00.1 System peripheral: PLX Technology, Inc. Device 87d0 (rev ca)
01:00.2 System peripheral: PLX Technology, Inc. Device 87d0 (rev ca)
01:00.2 System peripheral: PLX Technology, Inc. Device 87d0 (rev ca)
01:00.4 System peripheral: PLX Technology, Inc. Device 87d0 (rev ca)
01:00.4 System peripheral: PLX Technology, Inc. Device 87d9 (rev ca)
01:00.4 System peripheral: PLX Technology, Inc. Device 87d9 (rev ca)
02:09.9 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:09.9 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:09.9 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:09.9 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:10.9 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:11.9 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:11.9 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:12.9 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:13.9 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:13.9 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:13.9 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:13.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:13.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:13.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:10.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:11.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:10.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:10.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:10.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:10.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:10.0 PCI bridge: PLX Technology, Inc. Device 8749 (rev ca)
02:10.0 PCI bridge: ASMedia Technology, Inc. Device 8749 (rev ca)
02:10.0 PCI bridge: ASMedia Technology Inc. ASMI184e PCIE Switch Port
09:00.0 PCI bridge: ASMedia Technology Inc. A
```

Additionally, you can verify that the NVMe SSD's are detected by using the following command:

#### fdisk -l

# Example screenshot (SSD7101A-1):

```
Disk /dev/mapper/centos-swap: 8388 MB, 8388608000 bytes, 16384000 sectors Units = sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes

Disk /dev/nvme3n1: 512.1 6B, 812110190592 bytes, 1000215216 sectors
Unit = sectors of 1 * 512 = 312 bytes
Secter size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Unit = sectors of 1 * 512 = 112 bytes
Secter size (logical/physical): 512 bytes
Secter size (logical/physical): 512 bytes
Secter size (logical/physical): 512 bytes
Unit = sectors of 1 * 512 = 168, 812110190592 bytes, 1000215216 sectors
Unit = sectors of 1 * 512 = 168, 812110190592 bytes, 1000215216 sectors
Unit = sectors of 1 * 512 = 312 bytes
Secter size (logical/physical): 512 bytes
J/O size (minimum/optimal): 512 bytes / 512 bytes
Unit = sectors of 1 * 512 = 312 bytes
Secter size (logical/physical): 512 bytes / 512 bytes
Unit = sectors of 1 * 512 = 312 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
Disk /dev/mmenln: 2000.4 GB, 200938934016 bytes, 3907029168 sectors
Unit = sectors of 1 * 512 = 312 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
Disk /dev/mapper/centos-home: 192.9 GB, 192994429568 bytes, 376766464 sectors
Unit = sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
```

3. Download the appropriate driver from Software Downloads web page:

SSD7101A-1:

https://highpoint-tech.com/USA new/series-ssd7101a-1-download.htm

SSD7104:

https://highpoint-tech.com/USA new/series-ssd7104-download.htm

SSD7204:

https://highpoint-tech.com/USA new/series-ssd7204-download.htm

SSD7120:

https://highpoint-tech.com/USA new/series-ssd7120-download.htm

SSD6540:

https://highpoint-tech.com/USA new/series-ssd6540-download.htm

SSD6540M:

https://highpoint-tech.com/USA\_new/series-ssd6540m-download.htm

SSD7180:

https://highpoint-tech.com/USA\_new/series-hpc-download.htm

SSD7184:

https://highpoint-tech.com/USA new/series-hpc-download.htm

SSD7140:

https://highpoint-tech.com/USA new/series-ssd7140-download.htm

4. Using the system terminal with root privileges, browse to the directory where the driver download, and enter the following commands to extract the Linux Open Source Driver software package:

SSD7101A/7104/7204/7120/6540/6540M/7140;

```
tar zxvf RocketNVMe_Linux_Src_vx.x.xx_xx_xx_xx.tar.gz
```

```
root@debian:/home/test/Documents# tar zxvf RocketNVMe_Linux_Src_v1.2.20_20_06_05.tar.gz
rsnvme_linux_src_v1.2.20_20_06_05.bin
README
```

#### SSD7180/7184:

tar zxvf HighPoint\_NVMe\_G5\_Linux\_Src\_vx.x.xx\_xxxx\_xx\_xx.tar.gz

```
[root@localhost Downloads]# tar zxvf HighPoint_NVMe_G5_Linux_Src_v1.2.13_20_03_17.tar.gz hptnvme_g5_linux_src_v1.2.13_20_03_17.bin README .....
```

5. Install the Open Source Driver using the following command:

## SSD7101A/7104/7204/7120/6540/6540M/7140:

#### sh rsnvme\_linux\_src\_vx.x.xx\_xx\_xx\_xx.bin

#### SSD7180/7184:

# sh hptnvme\_g5\_linux\_src\_vx.x.xx\_xxxx\_xx\_xx.bin

- **6.** After the driver installation is complete, the system will prompt you to restart to make the driver take effect. **Manually restart the system.**
- 7. After the distribution as rebooted, open the system terminal with root privileges and check the driver status using the following command:

#### SSD7101A/7104/7204/7120/6540/6540M/7140:

## dmesg | grep rsnvme

The following screenshot shows driver version v1.2.20.

## SSD7180/SSD7184:

## dmesg | grep hptnvme

The following screenshot shows driver version v1.2.13.

Additionally, you can check the NVMe driver using the following command:

#### fdisk -l

# **Updating the Driver**

# 1. Prerequisites

- a. Ensure that the SSD7000 series controller or enclosure is attached to the motherboard.
- b. Open the system terminal with root privileges to check the current driver version by using the following command:

# SSD7101A/7104/7204/7120/6540/6540M/7140:

# dmesg | grep rsnvme

The following screenshot shows driver version v1.2.18.

```
[root@localhost test]# dmesg | grep rsnvme
[ 5.706371] rsnvme: loading out-of-tree module taints kernel.
[ 5.706371] rsnvme: module license 'Proprietary' taints kernel.
[ 5.706374] rsnvme: module license 'Proprietary' taints kernel.
[ 5.706741] rsnvme: module license 'Proprietary' taints kernel.
[ 5.707385] rsnvme:RocketNVMe RAID controller driver v1.2.18 block major fc
[ 5.707387] rsnvme:Found PLX upstream port (bus 1) (cmd 100407).
[ 5.707520] rsnvme:Mapped Va ffffaf560197c000 size 690 874710b5
[ 6.626578] rsnvme:Verify success(0).
[ 6.626582] rsnvme:Regvalue 60400ca sub bri dev 10 (bus_num+1) 2
[ 6.626590] rsnvme:[5] | vdid a808144d
[ 6.626594] rsnvme:PLX[0].nvme_addr[0] bus 5,device 0 func 0
[ 6.626595] rsnvme:PLX[0].bridge_addr[0] bus 2,device 10 func 0
```

# SSD7180/SSD7184:

## dmesg | grep hptnvme

The following screenshot shows driver version v1.2.13.

c. Download the latest driver from the Software Downloads webpage:

SSD7101A-1:

https://highpoint-tech.com/USA new/series-ssd7101a-1-download.htm

SSD7104:

https://highpoint-tech.com/USA\_new/series-ssd7104-download.htm

SSD7204:

https://highpoint-tech.com/USA new/series-ssd7204-download.htm

SSD7120:

https://highpoint-tech.com/USA new/series-ssd7120-download.htm

SSD6540:

https://highpoint-tech.com/USA new/series-ssd6540-download.htm

SSD6540M:

https://highpoint-tech.com/USA new/series-ssd6540m-download.htm

SSD7180:

https://highpoint-tech.com/USA\_new/series-hpc-download.htm

SSD7184:

https://highpoint-tech.com/USA\_new/series-hpc-download.htm

SSD7140:

https://highpoint-tech.com/USA new/series-ssd7140-download.htm

d. Open the directory where the latest driver version is located and open the system terminal with root privileges. Extract the Linux Open Source Driver software package.

SSD7101A/7104/7204/7120/6540/6540M/7140:

tar zxvf RocketNVMe\_ Linux\_Src\_vx.x.xx\_xx\_xx\_xx.tar.gz

```
root@debian:/home/test/Documents# tar zxvf RocketNVMe_Linux_Src_v1.2.20_20_06_05.tar.gz
rsnvme_linux_src_v1.2.20_20_06_05.bin
README
```

## SSD7180/7184:

# tar zxvf HighPoint\_NVMe\_G5\_Linux\_Src\_vx.x.xx\_xxxx\_xx\_xx.tar.gz

```
[root@DESKTOP-VTDAKOJ Documents]# tar zxvf HighPoint_NVMe_G5_Linux_Src_v1.2.17_2020_07_17.tar.gz
hptnvme_g5_linux_src_v1.2.17_2020_07_17.bin
RFADME
```

e. Make sure the system has an active internet connection. To install the latest Open Source Driver, open the system terminal with root privileges and enter the following command:

# SSD7101A/7104/7204/7120/6540/6540M/7140:

# sh rsnvme\_linux\_src\_vx.x.xx\_xx\_xx\_xx.bin

#### SSD7180/7184:

- f. After the driver installation is complete, the system will prompt you to restart to allow the new driver to take effect. Manually restart the system
- g. Once the distribution has rebooted, open the system terminal with root privileges and check the current driver version using the following command SSD7101A/7104/7204/7120/6540/6540M/7140:

dmesg | grep rsnvme.

The screenshot below shows driver v1.2.20 is installed:

```
root@debian:/home# dmesg |grep rsnvme
[ 3.000550] rsnvme: loading out-of-tree module taints kernel.
[ 3.000551] rsnvme: module license 'Proprietary' taints kernel.
[ 3.000565] rsnvme: module verification failed: signature and/or required key missing - tainting kernel
[ 3.001035] rsnvme:RocketNVMe RAID controller driver v1.2.20 block major fe
[ 3.001157] rsnvme:Round PLX upstream port (bus 1) (cmm 1100047).
[ 3.001179] rsnvme:Mapped Va 000000006adfc839 size 690 874910b5
```

#### SSD7180/7184:

The screenshot below shows driver v1.2.17 is installed:

```
[root@DESKTOP-VTDAKO] Documents]# dmesg | grep hptnvme

[ 529.274743] hptnvme: loading out-of-tree module taints kernel.

[ 529.274748] hptnvme: module license 'Proprietary' taints kernel.


[ 529.27570] hptnvme: module verification failed: signature and/or required key missing - tainting kernel

[ 530.34572] hptnvme: HighPoint NVMe RAID controller driver (G5) v1.2.17 block major fc

[ 530.347574] sest hostfor hptnvme
```

- h. Open the WebGUI to make sure it can connect to the controller and recognize the NVMe SSD's/RAID array.
- i. As shown below, the new driver has been successfully installed and loaded at bootup

   the WebGUI can connect to the controller and recognize the SSD's and RAID
   array:

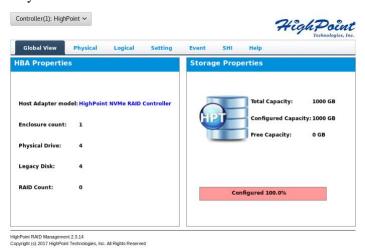

# **Uninstalling the Driver**

## 1. Prerequisites

a. Power off the system and remove the SSD7000 device from the motherboard.

Note: failing to remove the controller and SSD's when uninstalling the driver may result in data loss. The Linux distribution will load the default NVMe support after the SSD7000 driver has been uninstalled – this driver will only recognize the NVMe SSD's as separate disks.

#### 2. To uninstall the driver:

a. Open the system terminal with root privileges. Enter the following commands to uninstall the driver:

SSD7101A-1/7104/7204/7120/6540/6540M/7140:

hptuninrsnvme

SSD7180/7184:

hptuninhptnvme

b. Press 'Y' to confirm.

# SSD7101A-1/7104/7204/7120/6540/6540M/7140:

```
[root@localhost test]# hptuninrsnvme
Are you sure to uninstall the driver rsnvme from system? (Y/n): y
Removed symlink /etc/systemd/system/default.target.wants/hptdrv-monitor.service.
Removed symlink /etc/systemd/system/sysinit.target.wants/systemd-hptdrv.service.
All files installed have been deleted from the system.
```

## SSD7180/7184:

```
[root@DESKTOP-VTDAKO] Documents]# hptuninhptnvme
Are you sure to uninstall the driver hptnvme from system? (Y/n): y
Removed symlink /etc/systemd/system/default.target.wants/hptdrv-monitor.service.
Removed symlink /etc/systemd/system/sysinit.target.wants/systemd-hptdrv.service.
All files installed have been deleted from the system.
[root@DESKTOP-VTDAKO] Documents]#
```

- c. After uninstalling the driver, manually reboot the system.
- d. After the distribution has rebooted, open the system terminal with root privileges. And enter the following command to check the driver status:

#### SSD7101A-1/7104/7204/7120/6540/6540M/7140:

# lsmod | grep rsnvme

## SSD7180/7184:

# lsmod | grep hptnvme



e. If the system does not display information about "**rsnvme or hptnvme**", the driver has been successfully uninstalled.

# HighPoint RAID Management (WebGUI) Installation

# / Driver Installation Verification

The HighPoint RAID Management software is used to configure and monitor SSD's and arrays hosted by the SSD7000 series RAID controller or enclosure.

Download the RAID Management software package from the HighPoint website:

SSD7101A-1:

https://highpoint-tech.com/USA new/series-ssd7101a-1-download.htm

SSD7104:

https://highpoint-tech.com/USA new/series-ssd7104-download.htm

SSD7204:

https://highpoint-tech.com/USA new/series-ssd7204-download.htm

SSD7120:

https://highpoint-tech.com/USA new/series-ssd7120-download.htm

SSD6540:

https://highpoint-tech.com/USA new/series-ssd6540-download.htm

SSD6540M:

https://highpoint-tech.com/USA new/series-ssd6540m-download.htm

SSD7180:

https://highpoint-tech.com/USA\_new/series-hpc-download.htm

SSD7184:

https://highpoint-tech.com/USA\_new/series-hpc-download.htm

SSD7140:

https://highpoint-tech.com/USA new/series-ssd7140-download.htm

 Using the system terminal with root privileges, browse to the directory where the driver download, and enter the following commands to extract the management software package:

## tar zxvf RAID\_Manage\_Linux\_vx.x.xx\_xx\_xx\_xx.tgz

```
[root@localhost Downloads]# tar zxvf RAID_Manage_Linux_v2.3.14.1_17_07_26.tgz HPT CLI Guide.pdf README.txt RAID_Manage_Linux_v2.3.14_17_07_26.bin
```

2. Install the HighPoint RAID management software (WebGUI & CLI) using the following command:

#### ./RAID Manage Linux v2.x.x x x x.bin


```
[root@localhost Downloads]# ./RAID_Manage_Linux_v2.3.14_17_07_26.bin
Install .....
Package readline6/hptsvr-https-2.3.14-17.0718.x86_64.rpm will be installed!
Starting hptdaemon (via systemctl): [ OK ]
Clean .....
Finish .....
```

3. After the software is installed, open the WebGUI to make sure it can connect to the SSD7000 series RAID controller or enclosure.


4. You can also check the controller using the CLI (command line interface). Using the system terminal, enter the following command:

# hptraidconf

For more information about the CLI, please download the guide: Link.

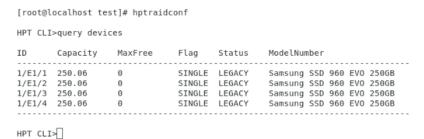

5. If the WebGUI/CLI can connect to the controller and recognized the NVMe SSD's, the driver has been installed and is functioning normally:

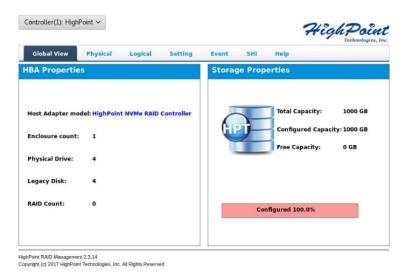

# **Troubleshooting**

# WebGUI

#### 1. The WebGUI fails to install

If you use a Ubuntu system, the system may prompt you about the lack of a **readline5** package when installing the WebGUI – this will interrupt the installation process.


```
root@test-PRIME-Z390-A:/home/test/Downloads# sh RAID_Manage_Linux_v2.3.14_17_07_26.bin
Install .....
Package readline lib not found! will be installed!
Install param error!
Clean .....
Finish ....
```

## **Solution**:

- With root permissions enabled, you can use the following command to load readline5 at using a terminal, and will be allowed to install the WebGUI: apt-get install libreadline5
- **b.** Once complete, restart the WebGUI installation procedure.

## 2. The WebGUI cannot connect to the controller

If you are unable to access the SSD7000 series RAID controller or enclosure using the WebGUI:

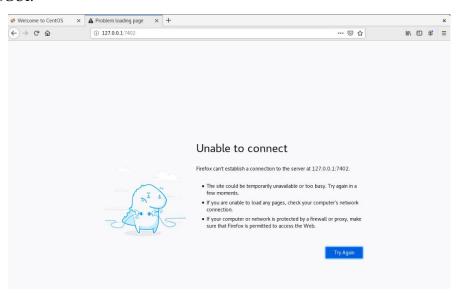

# a. WebGUI service did not start successfully.

#### **Solution**:

Start the WebGUI by opening the system terminal with root privileges and entering the following command:

## hptsvr

## b. The driver cannot be compiled.

```
[root@localhost test]# hptsvr
proc file invalid, dwControllerId=0
Driver is not loaded.
[root@localhost test]#
```

#### **Solution:**

- 1. Make sure at least one NVMe SSD's has been installed into the SSD7000 series RAID controller or enclosure.
- 2. Make sure motherboard can recognize the SSD7000 device and display NVMe information during the BIOS post.
- 3. If you use a CentOS system, open the system terminal with root privileges and entering the following command to install "elfutils-libelf-deve":

# yum install elfutils-libelf-devel

Once complete, install the SSD7000 driver once more.

4. If you use an Ubuntu/Debian system, open the system terminal with root privileges and entering the following command to install "libelf-dev":

# #yum install libelf-dev

Once complete, install the SSD7000 driver once more.

## 3. Fail to compile gcc, make and other driver files.

When installing the driver, due to various factors, driver files such as **gcc** and **make** cannot be compiled, thus interrupting the driver installation process:

```
root@test:/home/test# ./rsnvme_linux_src_v1.2.18.1_2020_03_18.bin
Verifying archive integrity... All good.
Uncompressing RocketNVMe RAID Controller Linux Open Source package installer.....
Checking and installing required toolchain and utility ...
Installing program make ... (failed)
Installing program gcc ... (failed)
Found program perl (/usr/bin/perl)
Found program wget (/usr/bin/wget)
```

This problem can be caused by:

# a. The system is not connected to a network (internet connection)

#### **Solution:**

- a. Double check the system's internet connection
- b. Once confirmed, reinstall the driver.

# b. System process is occupied/busy

#### **Solution:**

Open the system terminal with root privileges and enter the following command:

# apt-get update

This will prompt the system to release the process and update the download source. Install the driver again after the system process has been released.

**4. If you experience any other WebGUI or CLI related problems,** please submit a support ticket using our <u>Online Support Portal</u>, include a description of the problem in as much detail as possible, and upload the following:

Collect the following Log files: pci.log, drivermod.log, hptdrv.log, kernel.log

Please click the following <u>link</u> for more information about locating and collecting these logs. More information is also available in the Appendix section, starting on page 20.

# **Controller and Drive Detection Issues**

If the system is unable to detect the controller or SSD's, make sure to remove any NVMe device from the system that is not related to the SSD7000 series RAID controller or enclosure during the troubleshooting process. The presence of other NVMe devices may interfere with the detection of the SSD7000 device.

If you experience any other controller related problems, please submit a support ticket using our <u>Online Support Portal</u>, include a description of the problem in as much detail as possible.

Please check the **Appendix**, starting on page 20 – providing system logs, screenshots and other information about your system will enable our Support Department resolve your support issue as quickly and efficiently as possible.

# **Appendix**

When submitting s support ticket via our Online Support Portal, the following information will help out Support Department diagnose and resolve your issue as quickly and efficiently as possible.

## A. How to collect WebGUI information

Please take screenshots of each Tab (such as Physical, Logical, Event, etc.) and upload these to your support case. In addition, check the Event log tab and save a copy of the current log – please upload this to the support case.

# **B.** How to collect Log Files:

1. Provide a screenshot of the installed driver:

```
Please run hptuninhptnyme to uninstall the driver files.
Please restart the system for the driver to take effect. 
 [root@localhost Downloads]# \prod
```

2. Open system terminal and enter the following command:

# lspci >pci.log


The screenshot below shows that hardware has been identified:

```
[root@localhost test]# lspci
00:00.0 Host bridge: Intel Corporation 8th Gen Core Processor Host Bridge/DRAM Registers (rev 0a)
00:01.0 PCI bridge: Intel Corporation Xeon E3:1200 v5/E3:1500 v5/E3:1600 k5/E3:1600 k5/E3:160
```

3. Using the system terminal, enter the following command to access the drivermod.log:

# lsmod >drivermod.log

The screenshot below shows that the driver has been installed.

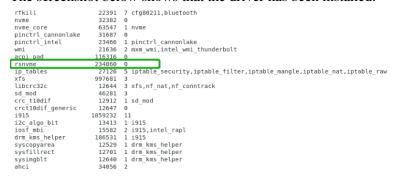

4. Using the system terminal, enter the following command to view the driver log:

# vi /var/log/hptdrv.log

5. To view the kernel log, open the system terminal and enter the following command:

# dmesg >kernel.log.